

914/918-HUB

Operation

The 914/918-HUB is a device that allows the user to expand the number of dry contact connections from 1 to 3 when used in conjunction with the 914-AVA or series 918 changeover. The 914-918 HUB uses 12 VDC and comes with a 120VAC adapter. The hub should be wired as shown in the wiring diagram.

Installation

Attach the 914/918-HUB to a wall or other structure using the mounting tabs located diagonally across from each other on the exterior of the hub. **DO NOT** open the hub module and try to fasten the housing by screwing through the enclosure. Doing so will void all warranties.

Please follow the attached wiring diagram for correct installation. Polarity is not an issue. Wiring should be done in compliance with all state & local codes.

914/918-HUB WIRING DIAGRAM

